



Rubber Flex Curbs Installation Instructions

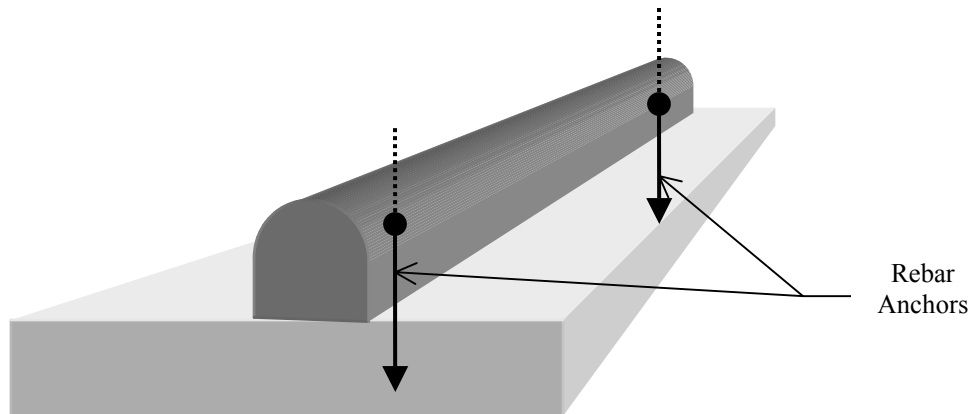

Installation Instructions (When Using Rebar Anchors)

1. Drill a $\frac{1}{4}$ " hole (for 3" & 4" Curb) for a $\frac{3}{8}$ " hole (for 6", 8", and 12" curbs) 8" from each end of the curb.
2. Insert anchors into the holes and drive into the ground. Recess the anchors to approximately half the thickness of the curb.

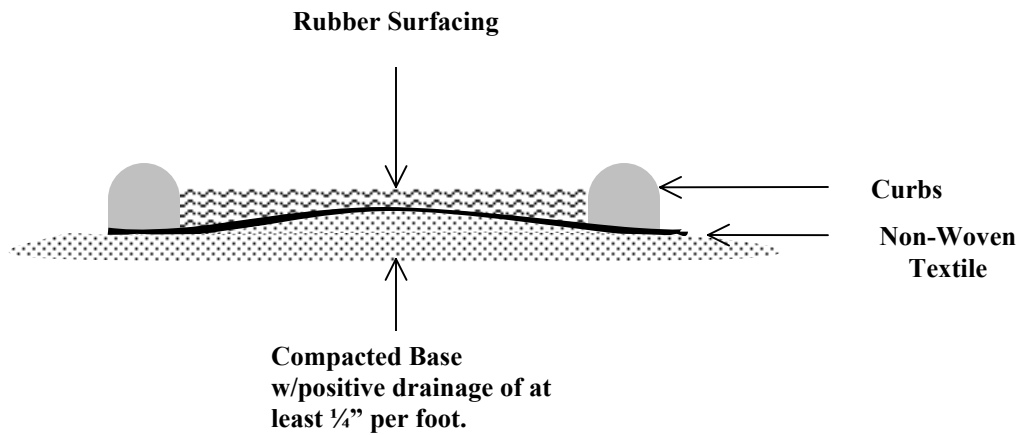

Installation Instruction (When Using Adhesives)

1. Install Non-Woven Geo-textile Membrane over compacted base.
2. Glue Rubber Flex Curbs to textile.
3. Glue Curbs end to end.